

Operating Instructions

Spring Driven Light Cord Reels

Model Number:

LD2040 163 2

IMPORTANT

Read this manual before attempting to operate or service this unit.



Care and Operation of your New Fluorescent Worklight

CAUTION

1. Inspect cord regularly for damage and replace if necessary for user safety.
2. Do not submerge.
3. When hanging reel on ceiling (see bottom of second page):
 - By hook: Close hook with pliers to prevent reel from falling down.
 - By Bracket Pin: With reel in place, bend end of "L" shaped pin to prevent pin from falling out.
 - Read mounting instructions carefully before installing.
4. Use in covered areas out of rain and weather.
5. Tool Tap Models:
 - Do not exceed maximum Tool Tap amperage rating of 7 Amps.
 - Pull cord all the way out of reel when using the tool tap.

CAUTION, IMPORTANT SAFETY INSTRUCTIONS - This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use an extension cord unless plug can be fully inserted. Do not alter the plug.

6/2018


OPERATION AND MAINTENANCE INSTRUCTIONS

1. Plug the unit into a 120 V AC outlet. The power supply cord is UL listed and meets OSHA standards.
2. Disconnect the power supply before servicing.
3. Keep the unit free from grease and dirt by using a damp cloth with mild detergent, or waterless hand cleaner. This removes dirt from scratches in the outer tube and will provide the best light output at all times. If the tube is damaged or badly scratched, it is easily replaced and is available as a replacement part (see opposite page for contact information).
4. Do not use solvents such as gasoline to clean unit or cord as it makes the parts brittle. Do not allow brake fluid to contact the outer tube as it will cause permanent damage.


RELAMPING

1. Disconnect the power supply (unplug).
2. Slide cord end cap down.
3. Remove screws and slide outer tube assembly off of light fixture.
4. Pull lamp out of socket and replace.
5. Reverse steps 1 - 3. Relamping finished.

Mounting Instructions

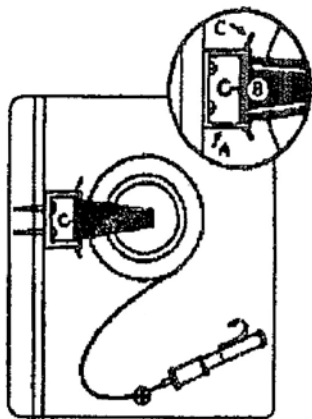

**Optional Wall or
Ceiling Mount
180° Rotation**

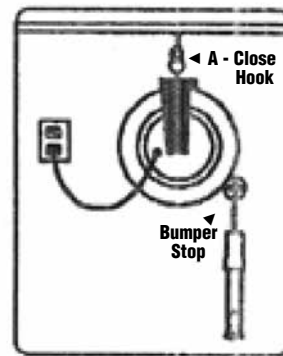

**Installation
Ceiling Mount
360° Rotation**

Optional Wall or Ceiling Mount

1. Select location within 2 feet of an electrical outlet.
2. Attach U shaped bracket "A" to solid part of the wall or ceiling using screws (provided).
3. Place hanger bracket "B" inside U shaped bracket "A" lining up small holes in bracket.
4. Insert locking pin "C" through lined-up holes. Be sure to bend the end of locking pin as shown.

Optional Ceiling Mount

1. Select location within 2 feet of an electrical outlet.
2. Screw the hanger hook securely into the ceiling. Hook must screw into wood frame behind drywall.
3. Hang reel on hook.
4. Close hook with pliers to prevent reel from coming off. Refer to point "A".
5. Adjust bumper stop so light or outlet hangs at desired length when cord is retracted.